

OWNER'S MANUAL

ButtKicker®

Power Amplifier BKA-PRO



RoHS
Compliant



Serial Number:

Please record the serial number from the rear panel of your amplifier for reference.

IMPORTANT SAFETY INSTRUCTIONS

READ BEFORE OPERATING EQUIPMENT

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



WWW.ULTIMATE.EU

- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING

Do not ingest the battery, Chemical Burn Hazard
(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children.
If the battery compartment does not close securely, stop using the product and keep it away from children.
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE**

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL
**ATTENTION: POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE,
NE RETIREZ PAS LE COUVERCLE (OU LE DOS)**

AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR
RÉFÉRER L'ENTRETIEN À UN PERSONNEL QUALIFIÉ

The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Le symbole de la flèche situé dans un triangle équilatéral sert à alerter l'utilisateur de la présence d'une "tension dangereuse" non isolée à l'intérieur du boîtier du produit pouvant être suffisamment importante pour constituer un risque de choc électrique pour les personnes.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



Le point d'exclamation dans un triangle équilatéral est destiné à alerter l'utilisateur de la présence d'instructions importantes d'utilisation et de maintenance (entretien) dans la documentation accompagnant le produit.

WWW.SIMULTIMATE.EU

WARNING
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE
BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

ATTENTION
POUR RÉDUIRE LE RISQUE D'INCENDIE OU
D'ÉLECTROCUTION, N'EXPOSEZ PAS CET APPAREIL À LA
PLUIE OU À L'HUMIDITÉ.

**ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES
LAME DE FICHE À LA GRANDE FENTE, ENTièrement
INSÉRÉE**



Earth symbol. The apparatus shall be connected to a mains socket outlet with a protective earthing connection.

Symbole de la terre. L'appareil doit être branché sur une prise secteur avec une connexion de protection à la terre.



**RoHS
Compliant**

Contents	Page Number
Important Safety Instructions	02
Amplifier Warnings / Cautions	03
Amplifier Usage Guidelines	05
Amplifier Specifications	05
Amplifier Operation - Front Panel	06 - 07
Amplifier Operation - Rear Panel	08 - 09
Remote Control	10
Power Status Indicator Modes	11
Contact Information	Back Cover
Warranty	Back Cover

WWW.SIMULTIMATE.EU

Amplifier Usage Guidelines

This amplifier is designed for use with the ButtKicker® BK-GT-PRO transducer.

Amplifier Specifications

Dimensions: 9.4" L x 7.6" W x 2.8" H / 23.85cm x 19.35cm x 7.25cm

Weight: 3.74 lbs./ 1.7 kgs.

Power Output: 150 watts @ 2 ohms
**Based on one-third power duty cycle*

Frequency Response: 10 - 300Hz -3dB

 
Input Sensitivity: 50 mVolt - RCA

High Cut Filter: 40Hz - 160Hz -3dB User Selectable
Roll-off: -12dB/Octave

Low Cut Filter: 25Hz -3dB
Roll-off: -12dB/Octave

WWW.SIMULTIMATE.EU

Front Panel

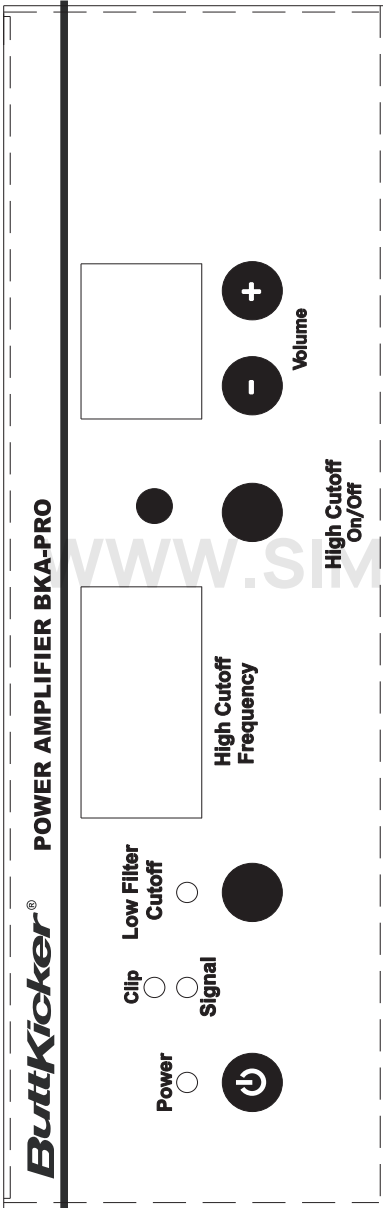

WWW.SIMULTIMATE.EU

Amplifier Operation - Front Panel (From Left to Right)

POWER

Power on or off the BKA-PRO The power indicator LED will illuminate green when the amplifier is on and red when the amplifier is off or in standby mode, activated after ~ 20 minutes without signal

POWER STATUS INDICATOR (Red/Green LED)

Red indicates two possible modes. (1) the amplifier is in Off mode, or (2) the amplifier was on, but reverted to Standby mode after 20 minutes of not receiving input signal. If the amplifier is in Standby mode (Red), and an input signal is reapplied, the amplifier circuits will automatically energize and the indicator light will turn green. Green indicates that all amplifier circuits are energized and ready to function. After 20 minutes of no input signal, the amplifier will revert back to the low power Standby mode. In Standby mode 2 pushes of the power button will turn the amp Off (Red), then On (Green).

CLIP INDICATOR LIGHT (Red LED)

Illuminates when maximum output is approached.

SIGNAL INDICATOR LIGHT (Green LED)

Illuminates when a signal passes through the circuits to the amplifier's output terminal.

LOW FILTER CUTOFF PUSH SWITCH

Pushing this button engages the low-cut filter which reduces all frequencies below 25Hz (-3dB) at a rolloff rate of 12dB per octave.

HIGH CUTOFF FREQUENCY

Displays the frequency above which frequencies are rolled off.

REMOTE

IR Sensor for the included remote control.

HIGH CUTOFF FILTER PUSH SWITCH

Engages the High Cutoff that rolls off the higher frequencies (-3db, rolloff rate of 12dB per octave).

VOLUME

Displays the volume level (intensity) of the amplifier.

 
VOLUME MINUS (—) & PLUS (+)

Adjust the volume level (intensity) of the amplifier.

POWER STATUS INDICATOR (Orange LED Fault Indicator)

See Page 11 for Fault Statuses and solutions.

Rear Panel

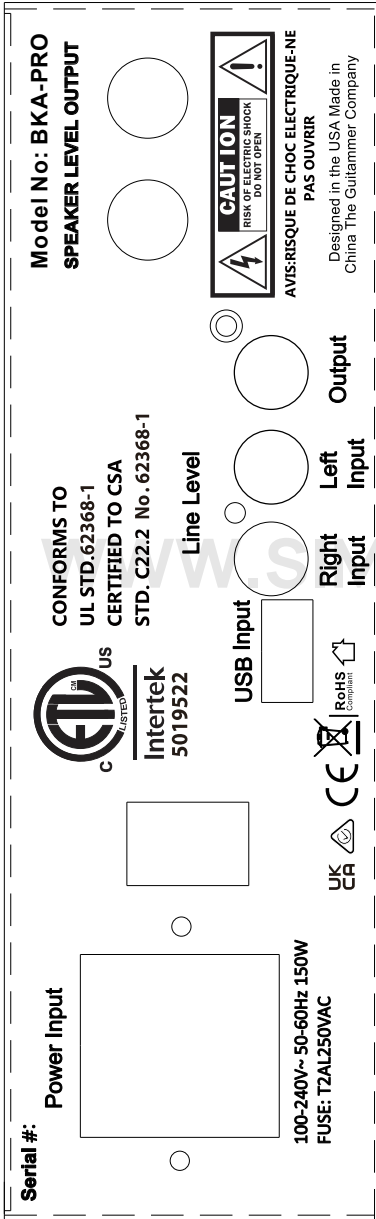

WWW.ULTIMATE.EU

Amplifier Operation - Rear Panel (From Left to Right)

IEC TYPE POWER CORD RECEPTICAL

Attach one end of power cord here for operation.

FUSE HOLDER (INTEGRATED INTO THE POWER RECEPTICAL)

Fuse: T2A.

A spare fuse is also contained in the fuse holder for your convenience. Pull straight out after removing power cord. Both the active fuse and the spare fuse are removed.

POWER SWITCH

Disconnects amplifier from AC power. Set this switch to the OFF position to consume no power.

USB INPUT

USB audio input, connect using included USB Type C Male to USB Type A Male cable. Best used with ButtKicker® HaptiConnect™ software.

LEFT & RIGHT LINE LEVEL INPUT (RCA)

RCA/phono input jacks. Input sensitivity of 50mV. Connect both Left and Right to sum stereo signal to mono.

LINE LEVEL OUTPUT (RCA)

RCA/phono output jack. Use to "daisy chain" signal to a second amplifier.

SPEAKER LEVEL OUTPUT BINDING POSTS - Bridged

Used for connecting to the ButtKicker® BK-GT-PRO transducer. Turn the amplifier off before connecting to the Speaker Output.

Remote Control Operation

POWER BUTTON

 
The Power Button duplicates the Power Button on the front panel of the amplifier. Please refer to the POWER BUTTON and POWER STATUS INDICATOR sections under "Amplifier Operation - Front Panel" on page 07 for operation information

VOLUME

The Volume Buttons duplicate the Volume dial on the front panel of the amplifier. Please refer to the VOLUME section under "Amplifier Operation - Front Panel" on page 07 for operation instructions.

EQ Control

Select Low-Cut to turn on/off the Low-Cut Filter. Select High-Cut to turn on/off the High-Cut Filter. Set the High Cut Filter Frequency using the High Cut Hz buttons.

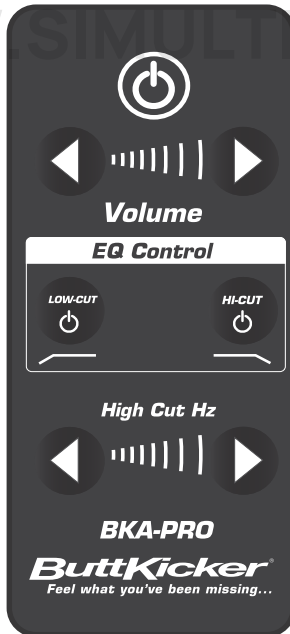

POWER STATUS INDICATOR (Orange LED Fault Indicator)

If Power Status Indicator displays an orange LED, the amplifier has experienced a problem and entered a fault mode.

THERMAL PROTECTION

This occurs if the amplifier's internal temperature becomes too high. The Power Status Indicator will change from Green to Orange, and output from amplifier will stop. Once the internal temperature has lowered sufficiently, the amplifier will resume normal operation and output.

DC PROTECTION

If the input signal to the amplifier is too high and excessive clipping occurs, the amplifier will enter this mode. The Power Status Indicator will change from Green to Orange and output from amplifier will stop. Unplug the input connection to the amplifier. Reset amplifier with the power button, lower amplifier volume. Check the signal source and lower its output level as well if necessary. Reconnect input connection. Amplifier will resume normal operation and output if signal levels have been lowered sufficiently.

If the amplifier does not exit fault mode, remove all output and input connections then power on amplifier.

If the amplifier remains in fault mode, contact support.

If the cause of the orange light is still unclear after reviewing this information, remove power and disconnect all input and output connections from the amplifier.

Wait at least 30 minutes before reconnecting AC power and attempting to power on again.

If the amplifier remains in fault mode, contact support.



If you have questions or need technical support,
please contact **The Guitammer Company**, not the
store where you purchased the product.

The Guitammer Company

Email us at:
support@guitammer.com

Visit us on the web at:
www.thebuttkicker.com

More Information

Visit www.thebuttkicker.com for support, FAQs, more information and details on this, and other ButtKicker® brand products and accessories.

WWW.SIMULTIMATE.EU

Limited Warranty

Your ButtKicker Power Amplifier BKA-PRO is warranted against failure for 1 YEAR unless otherwise stated. The Guitammer Company will service and supply all parts at no charge to the customer providing the unit is under warranty. Shipping costs are the responsibility of the customer. THE GUITAMMER COMPANY DOES NOT PAY FOR PARTS OR SERVICING OTHER THAN OUR OWN. A COPY OF THE ORIGINAL INVOICE IS REQUIRED TO VERIFY YOUR WARRANTY.

The Guitammer Company assumes no responsibilities for ButtKicker® low frequency audio transducers or speakers damaged by this unit. This warranty does not cover, and no liability is assumed, for damage due to: natural disasters, accidents, abuse, loss of parts, lack of reasonable care, incorrect use, or failure to follow instructions. This warranty is in lieu of all other warranties, expressed or implied. No representative or person is authorized to represent or assume for The Guitammer Company any liability in connection with the sale of servicing of products of The Guitammer Company. THE GUITAMMER COMPANY SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

When RETURNING merchandise to The Guitammer Company, you may call or email for a return authorization number. Describe in writing each problem. If your unit is out of warranty, you will be charged the current FLAT RATE for parts and labor to bring your unit up to factory specifications.



THE GUITAMMER COMPANY
...leaders in low frequency sound...

ButtKicker®
Feel what you've been missing...