

QUICK START GUIDE

Welcome to the future of immersive entertainment!

Thank you for purchasing
the ButtKicker Gamer PRO.

This guide will help you to quickly set up your new ButtKicker system
with your PC or gaming console.

Contents:

- A. ButtKicker Gamer PRO Haptic Transducer with Easy Clamp™ attachment mechanism
- B. 150 watt ButtKicker Gamer PRO Amplifier with wireless remote
- C. ~9.8' cable with quick release connecting ButtKicker Gamer PRO to amplifier
- D. ~3.3' cable with quick release and bare wire connecting to Gamer PRO transducer
- E. mini "Y" adapter
- F. ~6.5' RCA to mini (3.5mm) cable
- G. ~6.5' USB C to Type A cable
- H. Two Velcro® cables ties



ATTACH TO CHAIR OR RIG START HERE

Connect the ~3.3 cable (D) to the Gamer PRO Haptic Transducer.

1. Insert the tinned wire ends into the Gamer PRO transducer terminals. Press the terminal down, insert wire, release to capture. Connect red wire to the red (+) terminal, connect black wire to the black (-) terminal.

Attach the ButtKicker Gamer PRO Haptic Transducer to your Gaming or Office Chair.

1. Raise the pneumatic lift on your chair (make the seat of the chair higher). Then, push down the sleeve covering the center post to expose the post.
2. Loosen the large knob to open clamp. Loosen smaller knob to adjust clamp diameter to fit your chair. Place the clamp around the post.
3. Tighten both knobs to secure the ButtKicker Gamer PRO in place on the chair.
4. Use the supplied Velcro® cable wraps to tie the end of the ButtKicker Gamer PRO cable to one leg of your seat.

Attach the ButtKicker Gamer PRO Haptic Transducer to your Sim Rig.

1. Many Sim Rigs include a mounting adapter. The Gamer PRO will fit adapters designed for the Gamer2.
2. Loosen the larger knob to open clamp. Loosen smaller knob to adjust clamp diameter to fit your rig or adapter. Place the clamp around the post/adapter.
3. Tighten the knobs and secure the ButtKicker Gamer PRO in place on the sim rig.
4. Use the supplied Velcro® cable wraps to tie the end of the ButtKicker Gamer PRO to your sim rig.

Position the ButtKicker Gamer PRO Power Amplifier and connect to the ButtKicker Gamer PRO Haptic Transducer.

Do not turn on the amplifier until all of the connections are made!

1. Connect the long quick release cable to the short cable (already attached in first step) to the ButtKicker Gamer PRO Haptic Transducer. [Note that the cables may be disconnected using the quick release connector at any time if desired. HOWEVER, make sure the amplifier is turned OFF BEFORE disconnecting the cables.]
2. Connect the long quick release cable to the speaker input terminals on the back of the ButtKicker Gamer PRO Power Amplifier. The red (+) banana plug connects to the red terminal, the black (-) banana plug connects to the black terminal.
3. Position the amplifier near the audio source (PC), and accessible to the user.
4. Connect the power cord to the power terminal on the back of the ButtKicker Gamer PRO Power Amplifier and then plug it into a power outlet.

Connecting to a PC.

Connect using the included USB Type C to USB Type A cable. This method will require using ButtKicker HaptiConnect software. See the HaptiConnect manual for further information.

Connect using the included 3.5mm Y Splitter. Plug the 3.5mm Y Splitter into your PC's Headphone Out jack, plug your headphones (or speakers) into 1 side of the Y Splitter. Use the included 3.5mm to RCA Cable to connect from the Y Splitter to the Left and Right Inputs of the Gamer PRO amplifier.

Connecting to a Gaming Console.

Connect using the included 3.5mm Y Splitter. Plug the 3.5mm Y Splitter into your console controller's Headphone Out jack, plug your headphones (or speakers) into 1 side of the Y Splitter. Use the included 3.5mm to RCA Cable to connect from the Y Splitter to the Left and Right Inputs of the Gamer PRO amplifier.

Connect using a HDMI 2.0 (or HDMI 2.1) audio extractor (not included). Connect the HDMI extractor in-line with your console and TV/Audio System. Use the included 3.5mm to RCA Cable to connect from the HDMI Extractors 3.5mm Output to the Left and Right Inputs of the Gamer PRO amplifier.

Play a Game, Music, or Movie.

Adjust the volume on the Gamer PRO amplifier to your personal preference and enjoy!

Recommended Gamer PRO Amplifier Filter Settings.

Media	Low Cutoff Switch	High Cutoff Switch	High Cutoff Freq. Knob
Games	off	on	80 Hz
Music	on	off	disabled by the high cut switch
Movies	off	on	80 Hz